



Quick installation manual for modular roof tile sheets

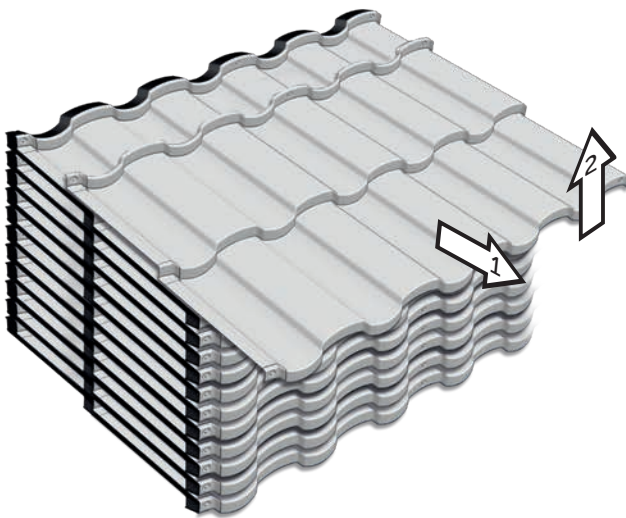


Installation of battens and counter battens,
eaves solution.

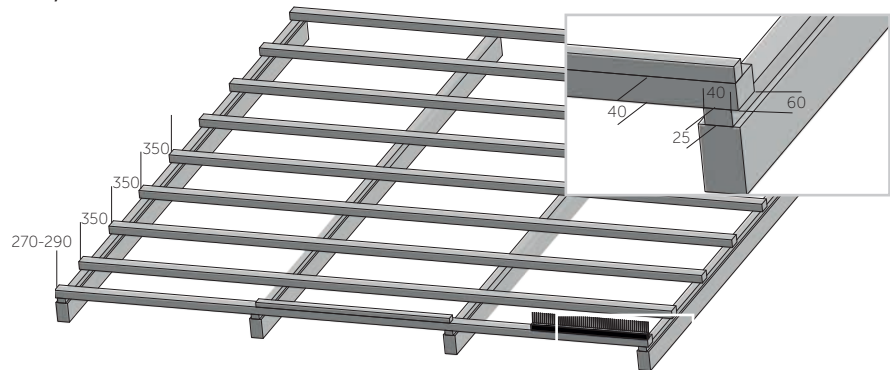




Retrieving sheets from the package.

Moving the sheets: The sheets should be carried by their ribbings (green). It is not allowed to carry the sheet by their edges (red), as it may cause gaps in the longitudinal overlaps.

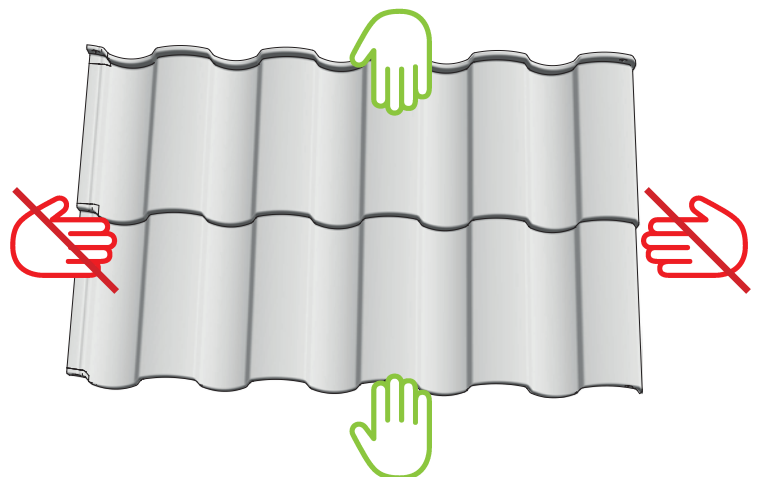

1.

Laying the first sheet on the substructure.

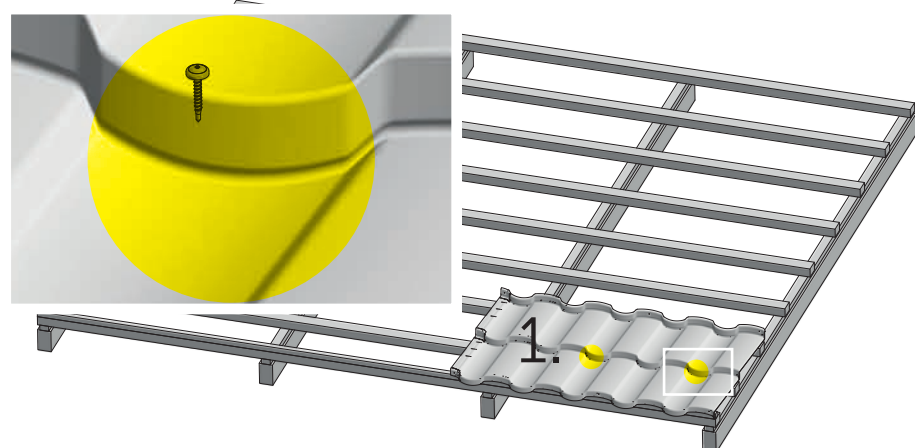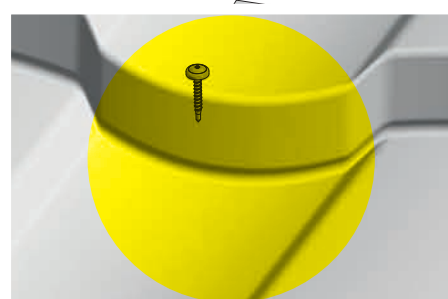
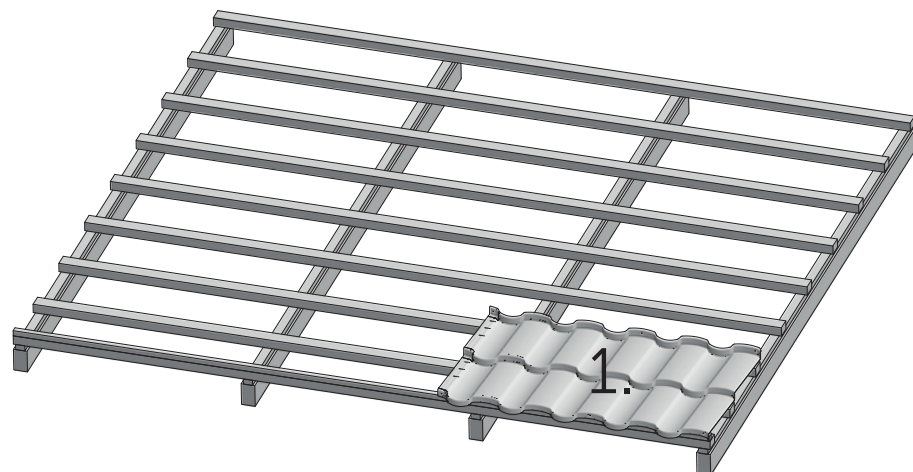


2.

Fixing to the battens of the first sheet with 4,8 x 38 TORX LP or 4,8 x 35 farmer screws.

5.

Installation of the remaining part of the sheet strip.


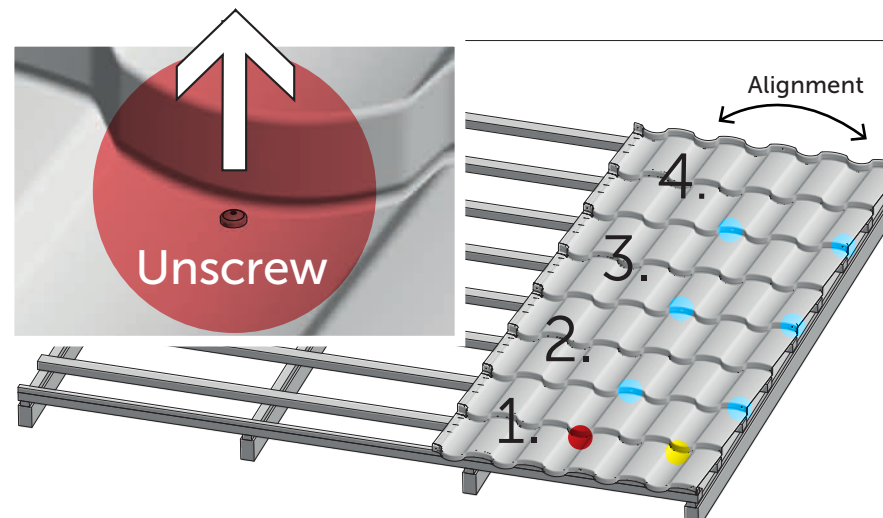
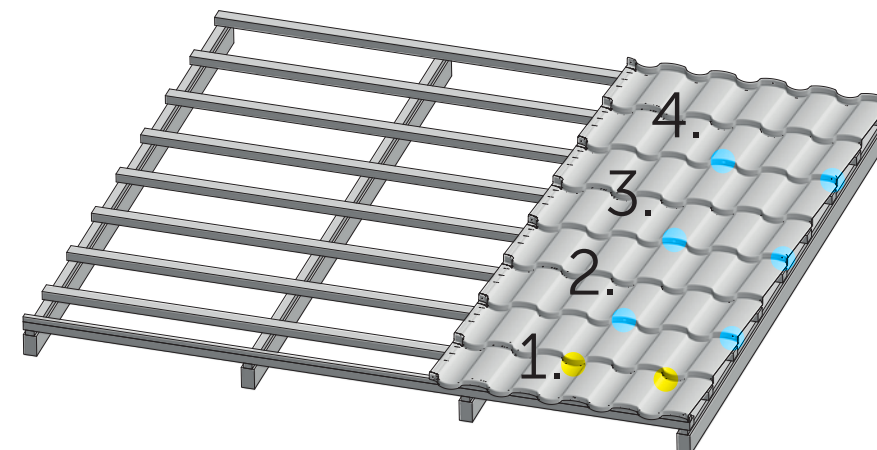


6.

Aligning the sheet strips with the roof surface.


3.

Laying the second sheet.

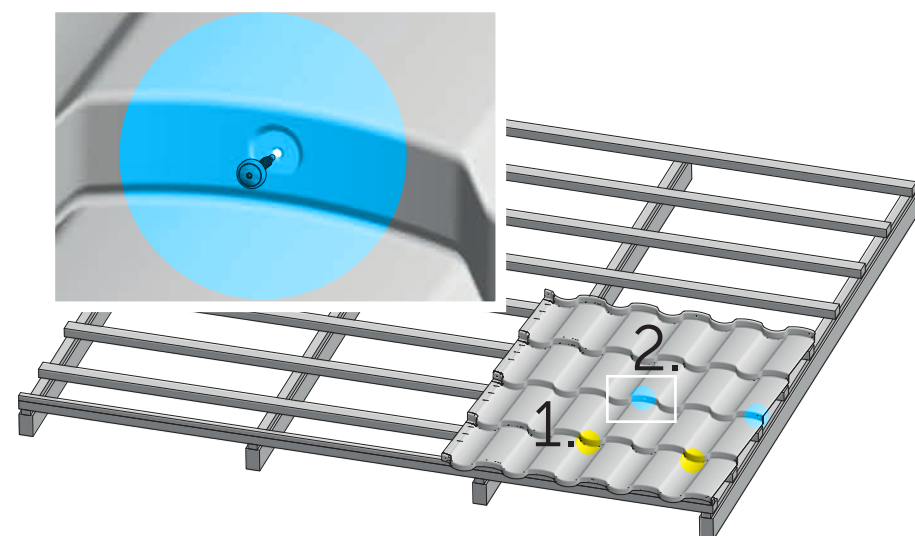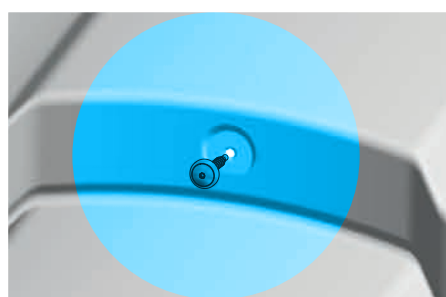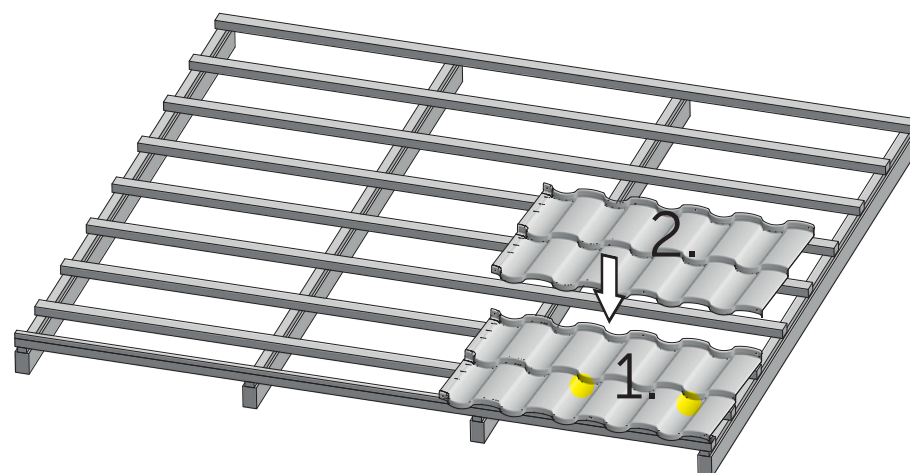


4.

Joining the sheets. 4,8 x 23 TORX LP or 4,8 x 19 farmer's screws.

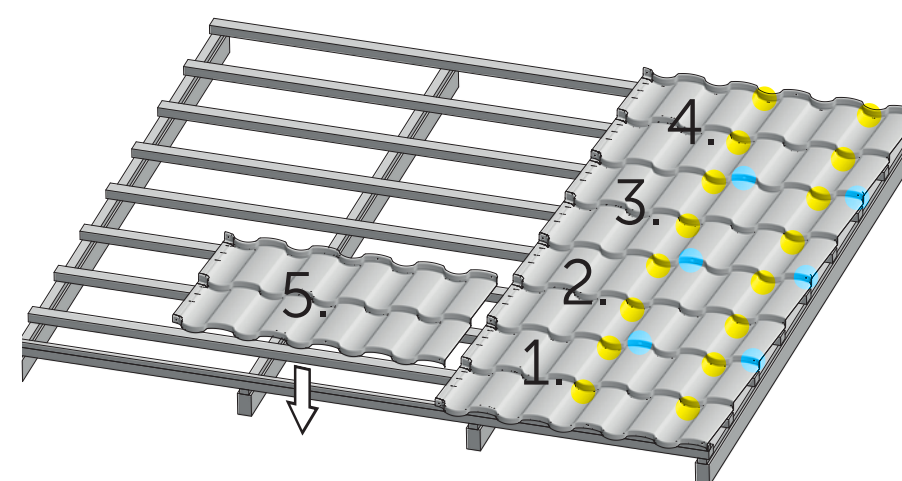

7.

Fixing to the battens of the first sheet strip and laying the first sheet in the subsequent strip

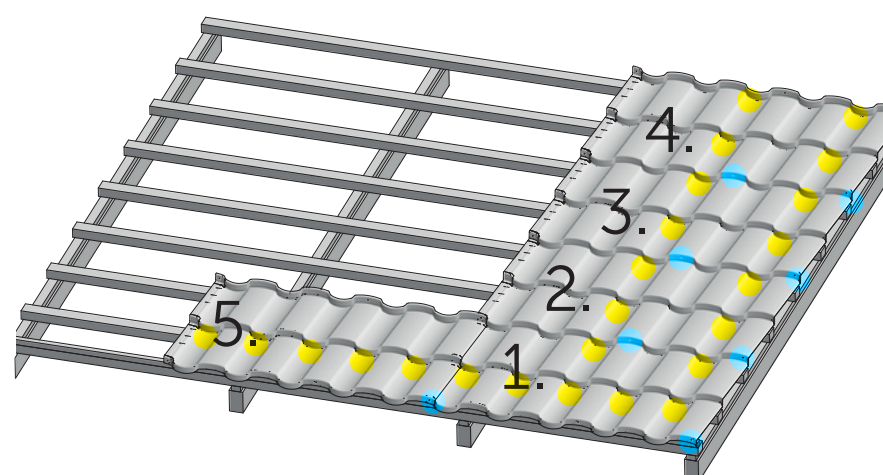


8.


Joining sheets and fixing to battens.

9.

Installation of the remaining part of the sheet strip and screw arrangement.

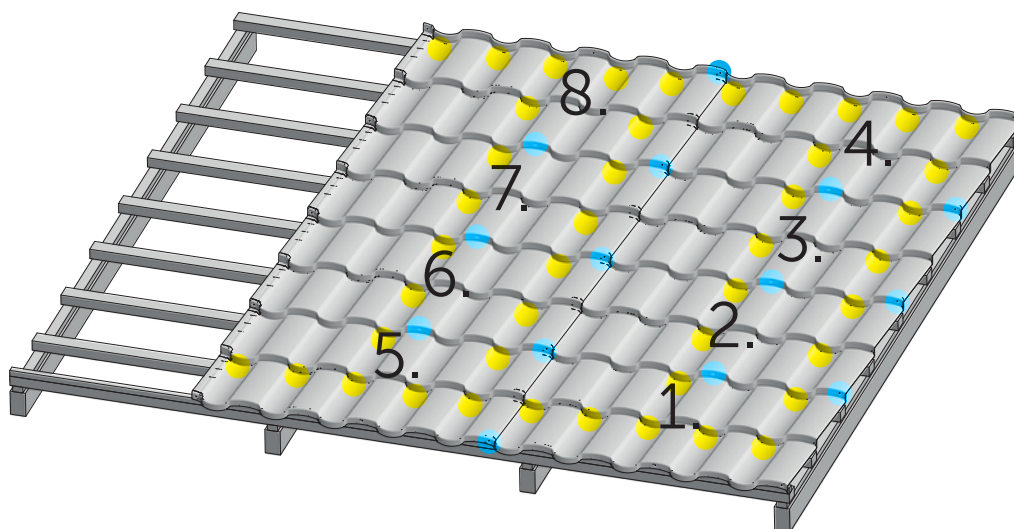

INSTALLATION OF THE RIDGE CAP

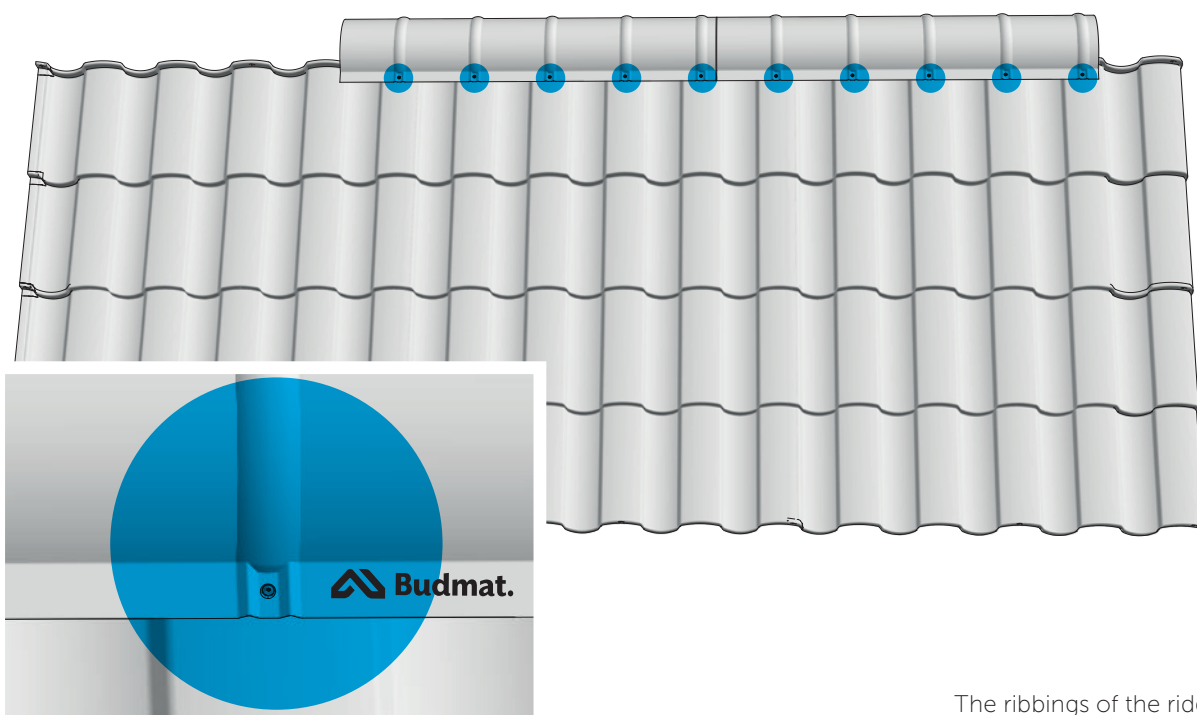

The ribbings of the ridge tile should flush with the highest points of the Rialto modular roof tile sheet.
Embossed logo is a confirmation of the authenticity of the product.