


Quick installation manual for modular roof tile sheets




Installation of battens and counter battens,
eaves solution.

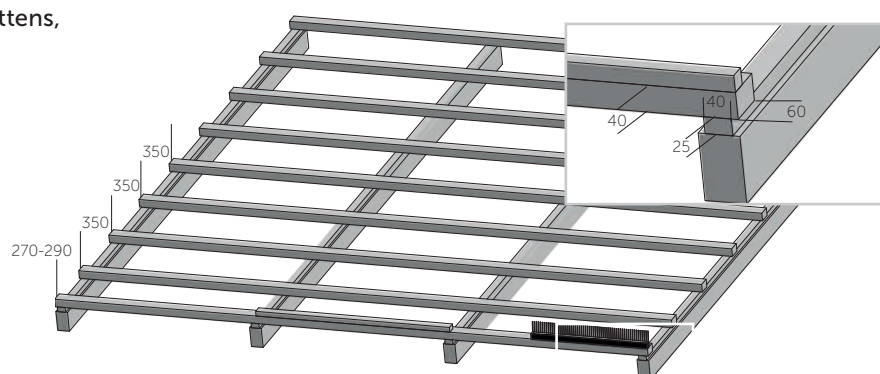


Retrieving sheets from the package.

Moving the sheets: The sheets should be carried by their ribbings (green). It is not allowed to carry the sheet by their edges (red), as it may cause gaps in the longitudinal overlaps.

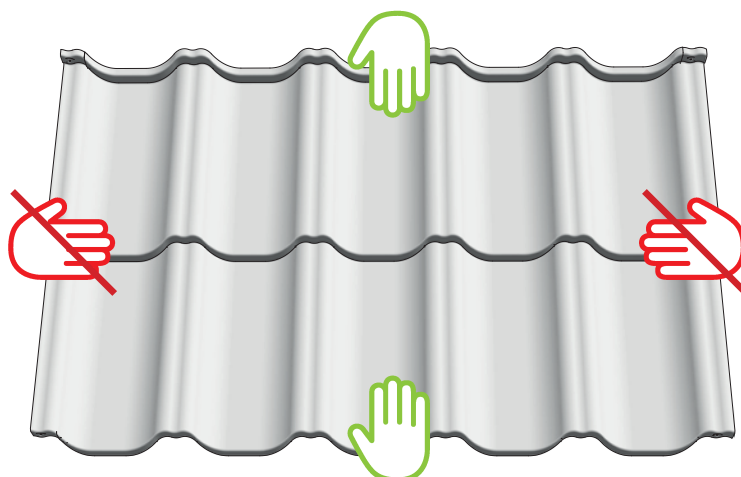




1.

Laying the first sheet on the substructure.

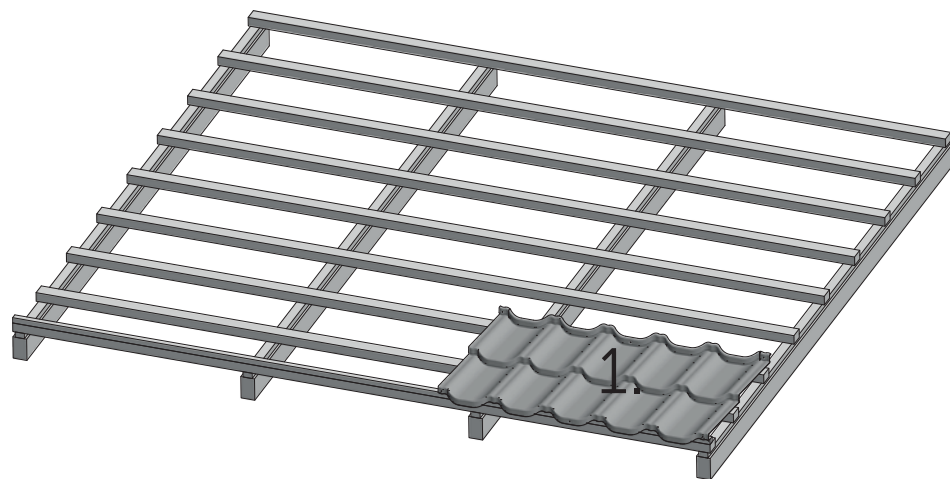


5.

Laying the third sheet.

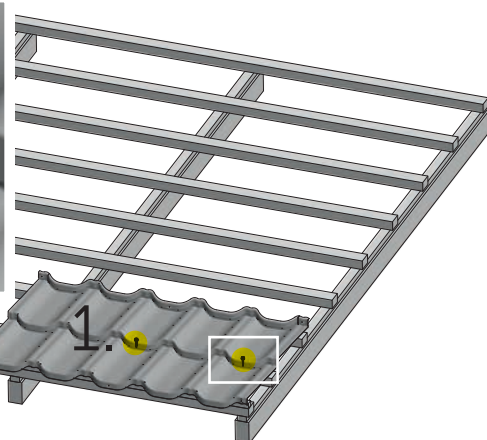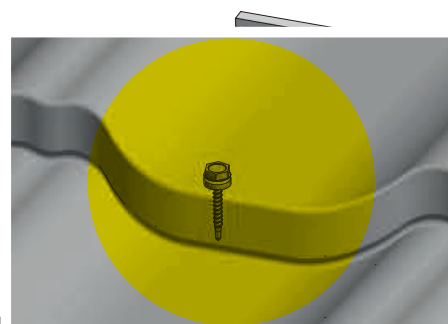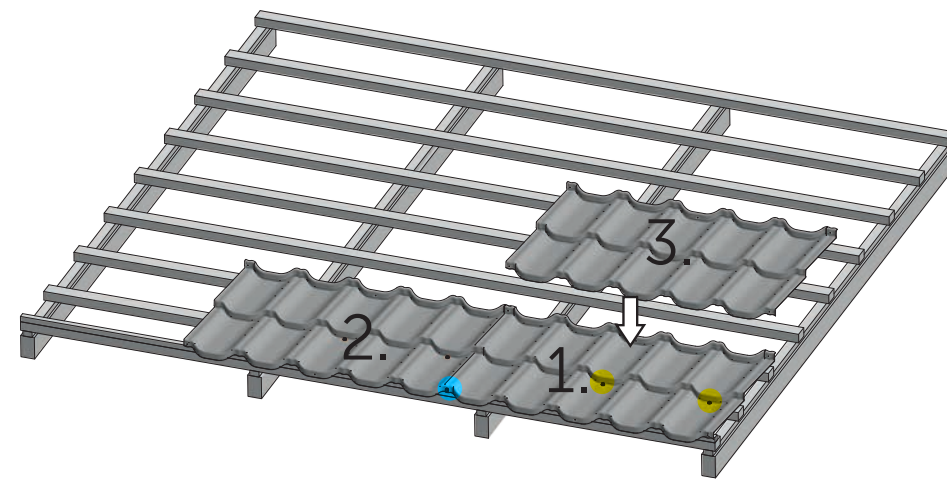

2.

Fixing to the battens of the first sheet with 4,8 x 38 TORX LP or 4,8 x 35 farmer screws.


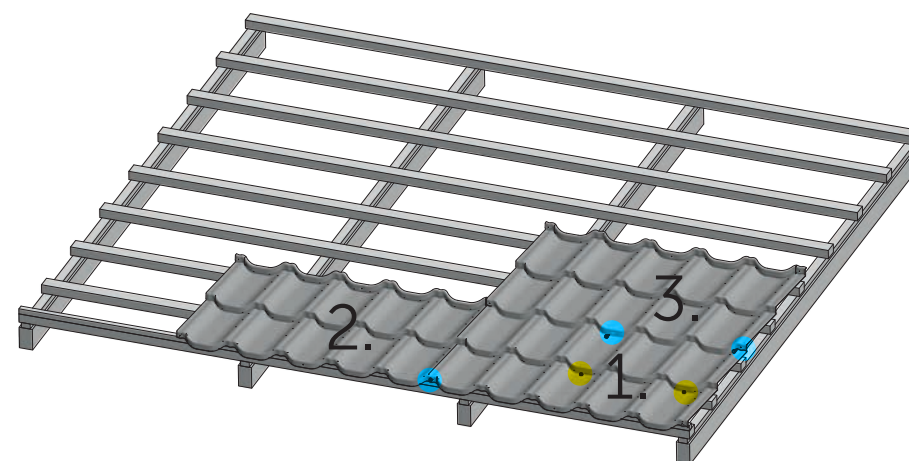


6.

Joining the first with the third sheet.



3.

Laying the second sheet.

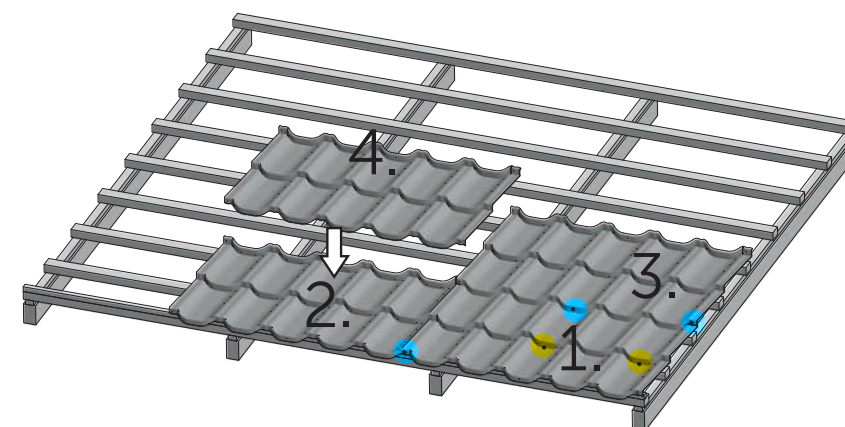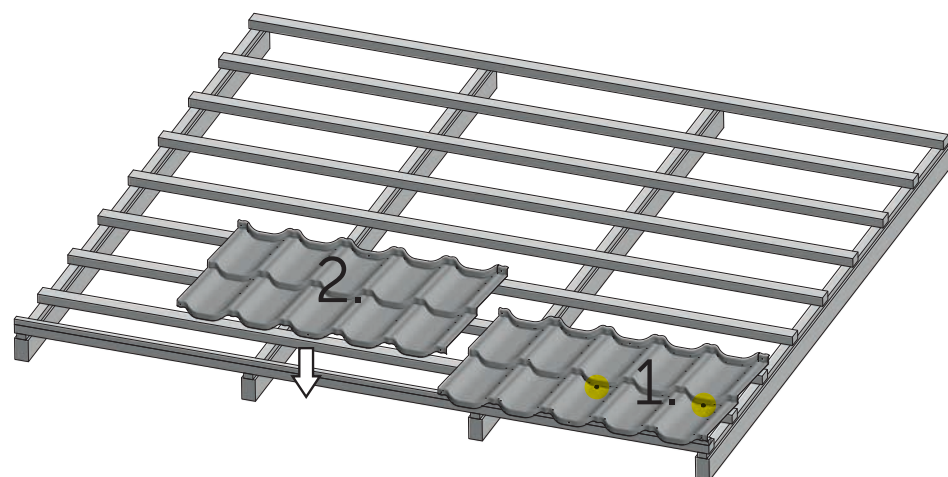


7.

Laying the fourth sheet in a node.

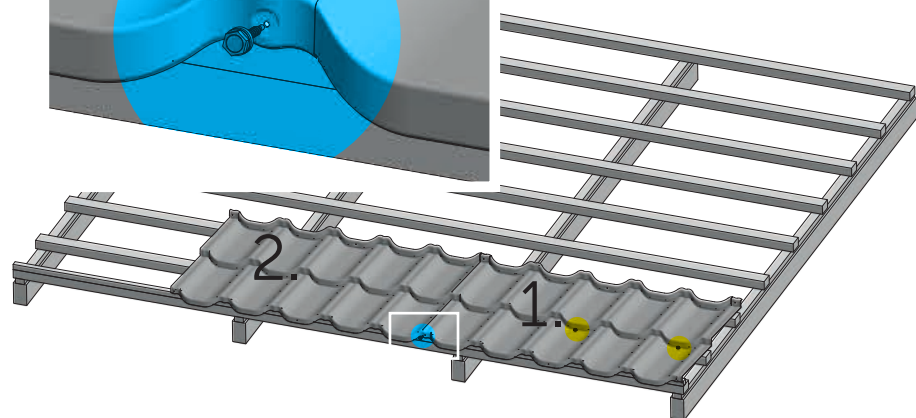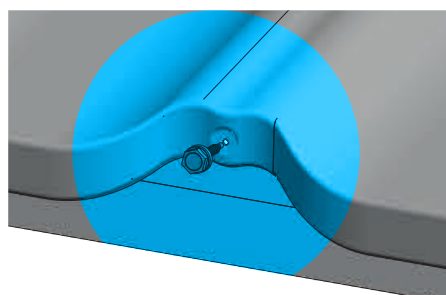

4.

Joining the sheets.
4,8 x 23 TORX LP or 4,8 x 19 farmer's screws.

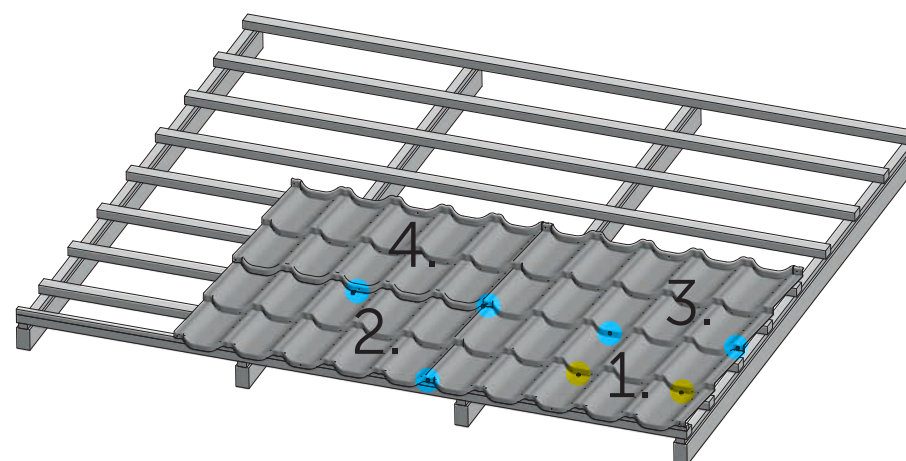


8.

Joining sheets in a node together.


9.

Aligning the sheets with the roof surface.

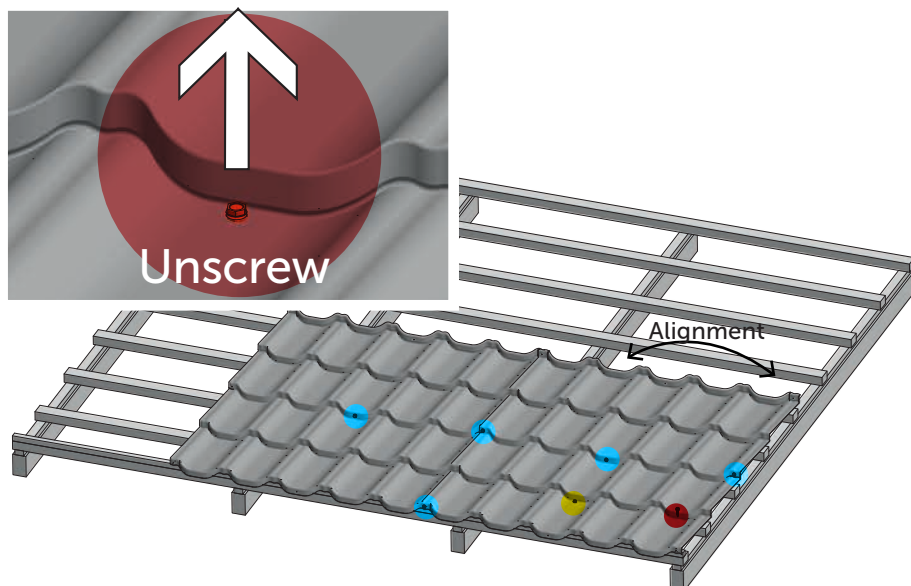


10.

Installation of the remaining part of the sheets and screw arrangement.

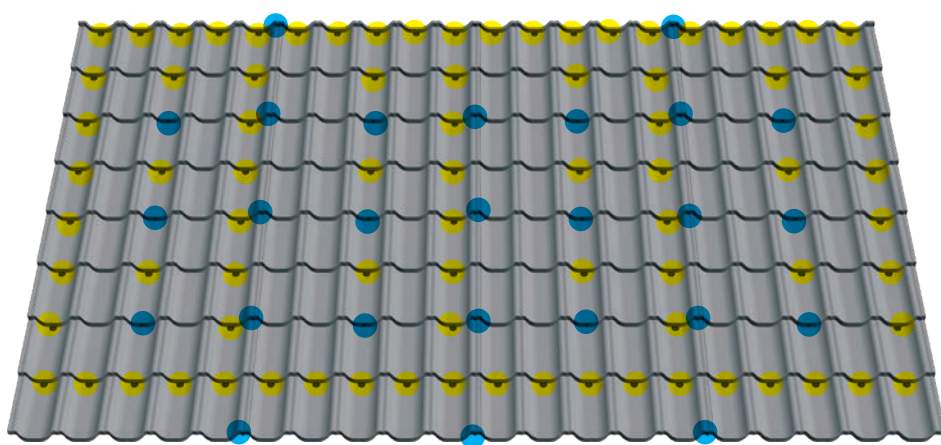

INSTALLATION OF THE RIDGE CAP

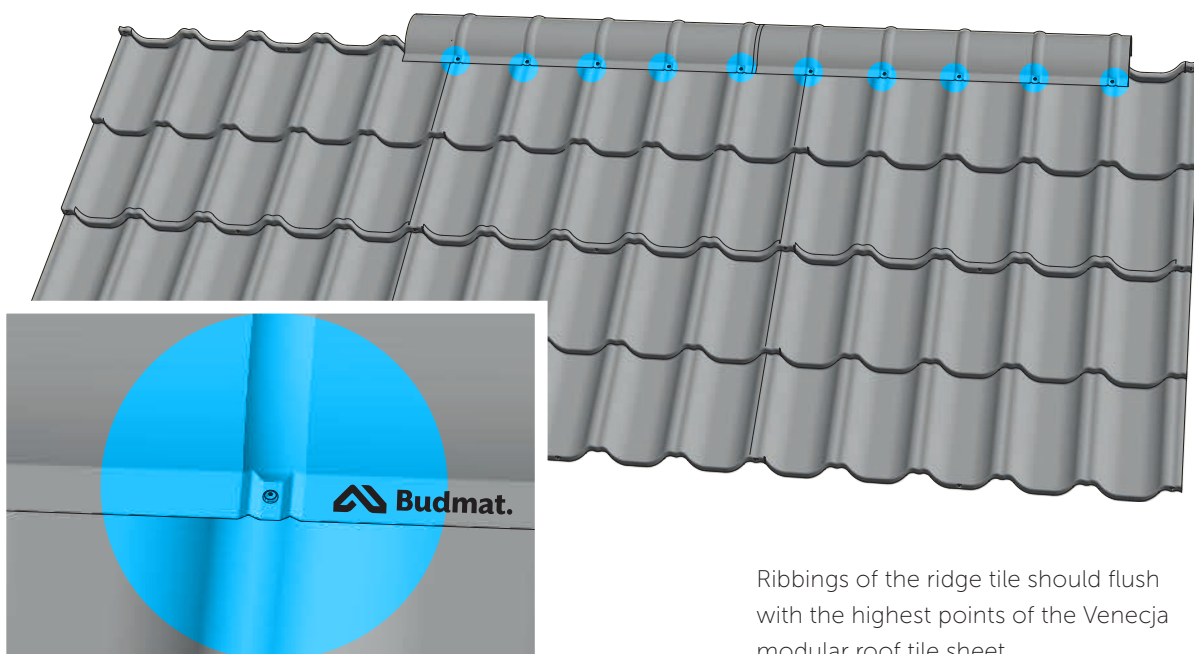

Ribblings of the ridge tile should flush with the highest points of the Venecja modular roof tile sheet.
Embossed logo is a confirmation of the authenticity of the product.